

OPERATING OF THE VALVES IN DIFFERENT CAR MODES

GEAR	Back valves in Sport mode	Back valves in Comfort mode
1	Open	Open
2		Open
3		Closed between 2500 rpm and 3500 rpm
4		Closed to 4000 rpm
5		Closed to 4000 rpm
6		Closed to 4000 rpm
7		Closed to 4000 rpm

Use your Exhaust button or Akrapovič Keyfob, to switch between different Sound Modes:



Static (Park or Neutral)

While revving in Urban mode, valves will open automatically above 900rpm.

Drive

For safety reasons, your exhaust system will automatically switch to Race mode when your engine will exceed 4000 revolutions per minute.



Static (Park or Neutral)

While revving in Urban mode, valves will open automatically above 900rpm.

Drive

For safety reasons, your exhaust system will automatically switch to Race mode when your engine will exceed 3000 revolutions per minute.

Note: Switching from Sport to Sport+ will always set Race mode for the valves.