


User manual for the EGR system removal in BWM N47N engine


The two main groups of sets are mounted in the places as shown on the picture below.

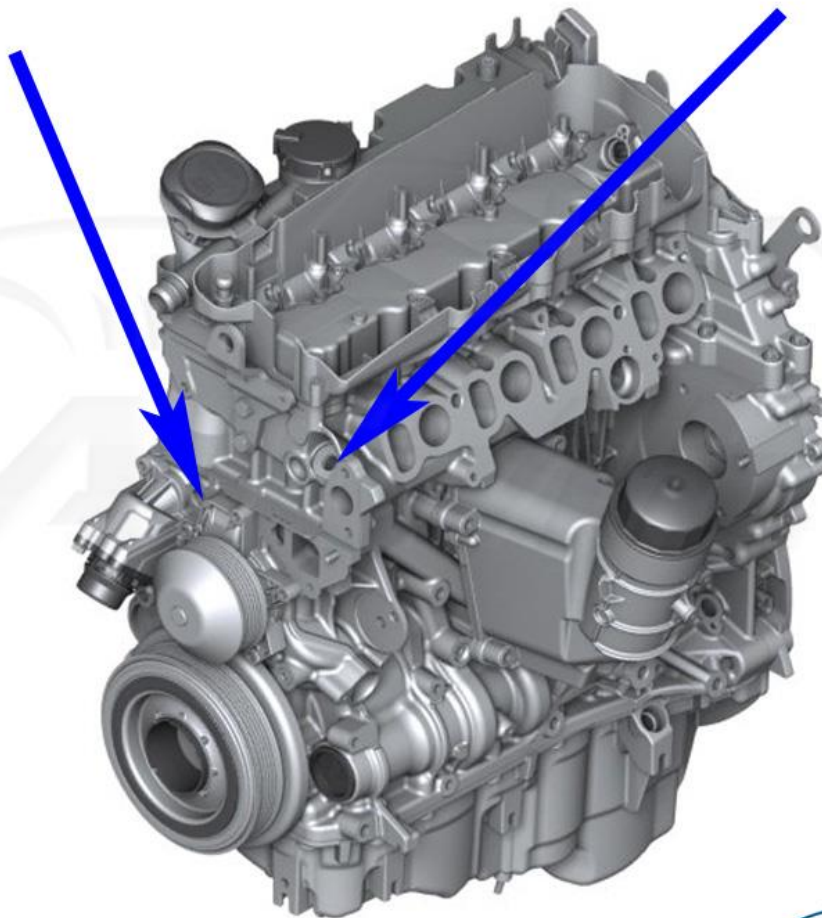







You can remove all the parts that are visible on the picture below.

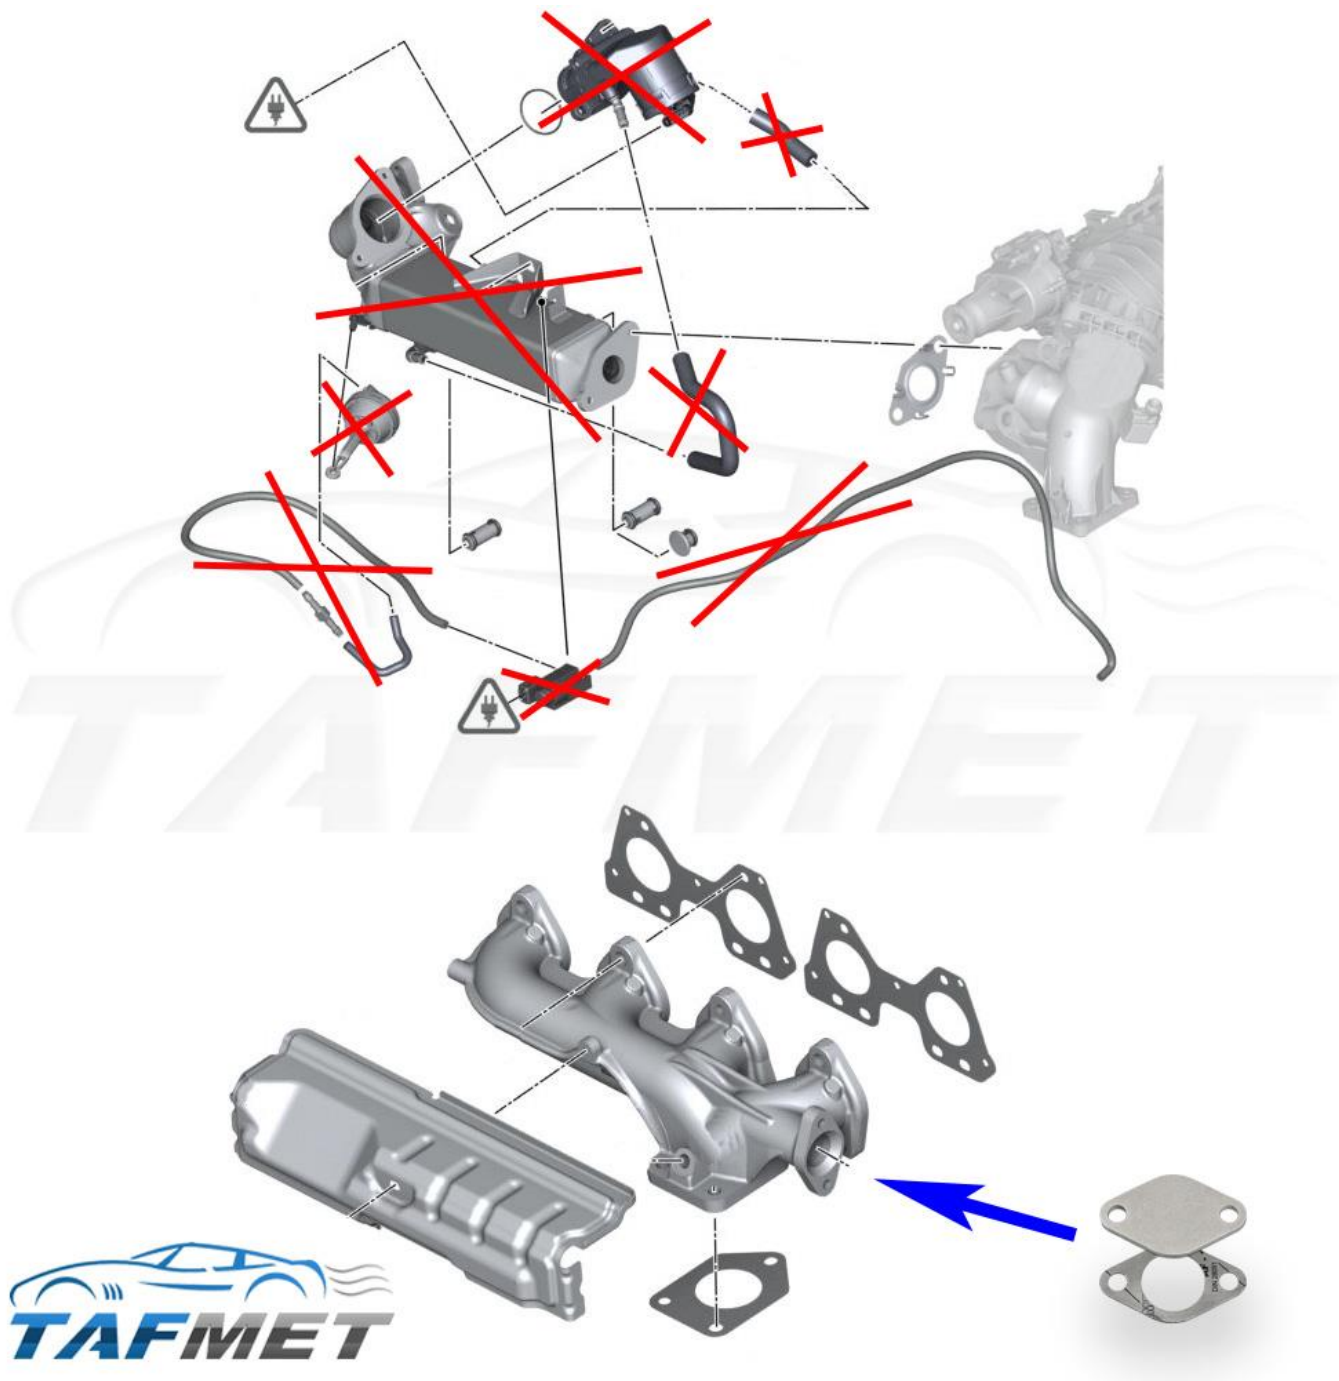

The exit from the exhaust manifold to the EGR system is blocked with a blanking plate with a gasket that are present in the kit.

The hole in the intake manifold is closed with a blanking plate with a gasket included in the set.

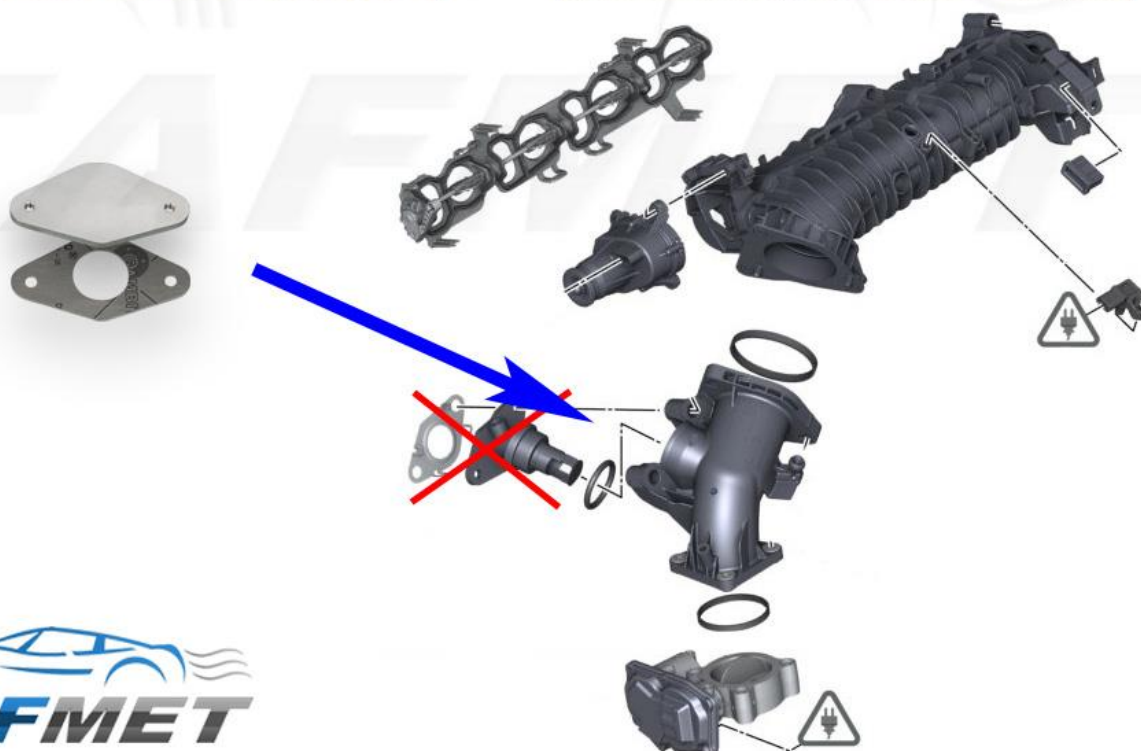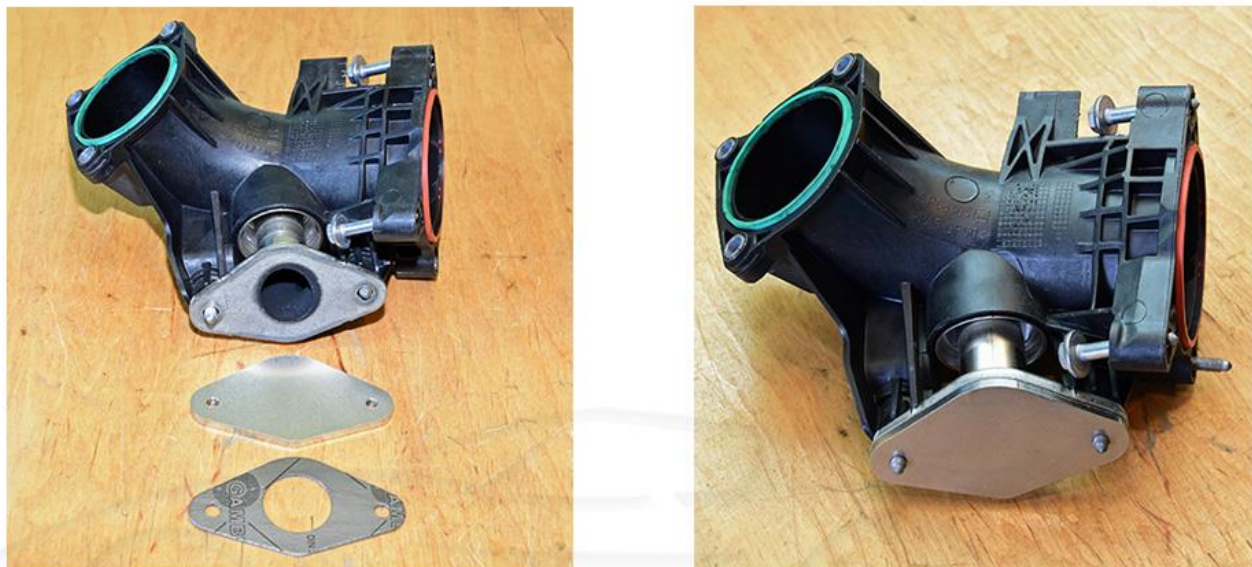

Now you must do everything the opposite way. You also have to make sure that all the cables and pipes are connected properly before you run the engine!!!