



PART NUMBER

PFF5-6001G

DESCRIPTION

FRONT CONTROL ARM TO CHASSIS
BUSH CASTER OFFSET

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 2 x Stainless Steel Sleeves
1 x Grease

Please read the complete fitting instructions and check package components before fitting.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*

All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove original bush from arm.
2. Clean any dirt and corrosion from bore in arm.
3. Fit the polyurethane bush into bore of arm.
4. Apply some provided grease to bore and mounting faces of each bush.
5. Fit the stainless steel sleeve into bush with bore centred away from centre of vehicle, positioned as shown in Figure 1.
6. Refit arm. Tension all hardware to manufacturers recommended torque settings.

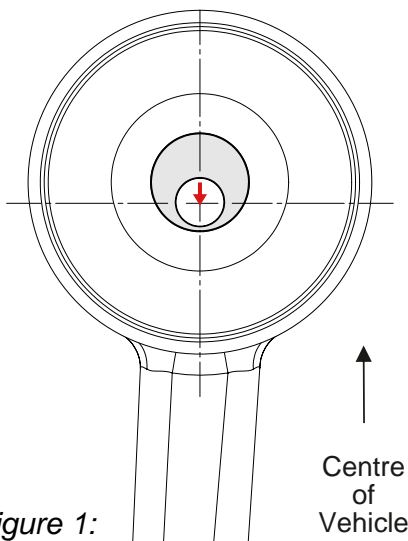


Figure 1:

